



► TWENTEBELT WIRE MESH BELTS

Endless connection by means of connection tubes

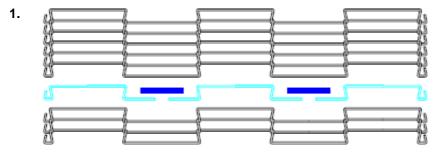


- Separate a wire rod from the belt
- ▶ Split this wire rod as illustrated
- ! Attention:

 Do not position the tubes in the driven sections of the belt

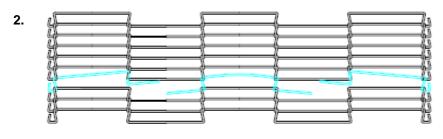

 - Connect the edges on both sides of the belt
- i The use of a screw driver can simplify the act
- ► Insert all individual parts of the rod
- 3.
- Complete the connection by joining all sections with the separated rod and straightening it if necessary
- i The use of a long nose plier can simplify the act



- ▶ Place the tubes on to the wire ends
- ► Fix the tubes on the rod by squeezing the ends with the use of pliers
- Your Twentebelt Wire mesh belt is ready for use
- ! Attention:

Wire mesh belts with a double bent Z-side can also be connected according to the same instructions

Connection tubes can also be used for repairs, if necessary

- ► Tel. +31 (0)74 242 47 05 ►
- ► Fax +31 (0)74 243 16 59 ►

- ▶ sales@twentebelt.com ▶
- ➤ www.twentebelt.com ►